



# BATTERY CURRENT SENSOR

## ON-VEHICLE INSPECTION

1. INSPECT BATTERY CURRENT SENSOR ASSEMBLY
- (a) Measure the resistance of the sensor.
- Standard resistance

Tester Connection	Condition	Specified Condition
2 (VC5) - 4 (E2)	Always	3 to 10 kΩ
2 (VC5) - 3 (IB)	Always	Below 0.5 kΩ
3 (IB) - 4 (E2)	Always	3 to 10 kΩ
1 (THB) - 4 (E2)	20 to 30°C (68 to 86°F)	1.5 to 2.5 kΩ

HINT:  
Tester connection 1 (THB) - 4 (E2):  
As the temperature increases, the resistance decreases (see graph).  
If the result is not as specified, replace the sensor assembly.

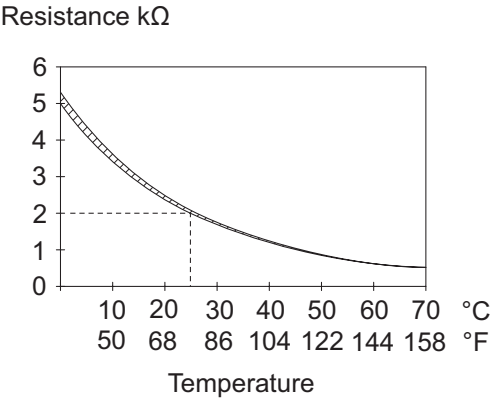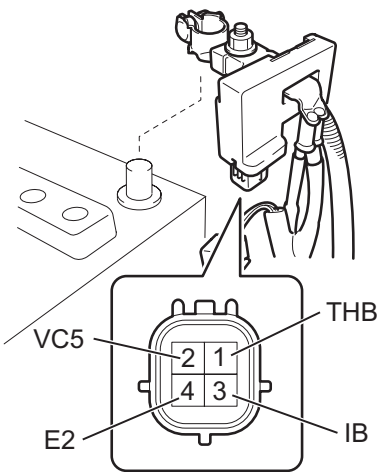

A132490E01